

## **SHARP TROUBLE & ERROR CODES**

### **AL-1020, AL-1200, AL-1220, AL-1250**

#### 4. Trouble Codes

Main code	Sub code	Trouble content	Detail of trouble
E7	03	HSYNC cannot be detected.	LSU (laser diode, reception element, APC circuit) trouble LSU drive circuit (ASIC) trouble
E7	04	CCD white level trouble	CCD drive circuit (CCD PWB, ASIC harness) trouble Copy lamp lighting trouble (Copy lamp, inverter PWB)
E7	05	CD black level trouble	CCD drive circuit (CCD PWB, ASIC, harness) trouble
E7	12	Shading trouble (white correction)	Dirt on white plate for scanning white level
E7	14	ASIC connection trouble	Improper connection between CPU and ASIC (pattern cut, improper connection of lead pin)
E7	15	Copy lamp OFF trouble	Copy lamp or copy lamp drive circuit (inverter PWB) trouble Copy lamp disconnection
L1	00	Feed is not completed within the specified time.	When the mirror base is returned for the specified time (6 sec) in mirror initializing after turning on the power, the mirror home position sensor (MHPS) does not turn OFF. Or when the mirror base is fed for the specified time (about 6 sec) after start of copy return, the mirror home position sensor (MHPS) does not turn OFF.
L3	00	Return is not completed within the specified time.	When the mirror base is returned for the specified time (6 sec) in mirror initializing after turning on the power, the mirror home position sensor (MHPS) does not turn ON. Or when the mirror base is returned for the specified time (about 6 sec) after start of copy return, the mirror home position sensor (MHPS) does not turn ON.
L4	01	Main motor lock	When the main motor encoder pulse is not detected for 100msec.
L6	10	Polygon motor lock	The lock signal (specified rpm signal) does not return within a certain time (about 20sec) from starting the polygon motor rotation
H2	00	Thermistor open detection	The fusing thermistor is open.
H3	00	Heat roller abnormally high temperature	The fusing temperature rises above 240°C.
H4	00	Heat roller abnormally low temperature	The fusing temperature does not reach 185°C within 27 sec of turning on the power, or the fusing temperature keeps at 140°C.
U2	01	Counter sum check error	When the counter check sum value stored in the EEPROM is abnormal.
U2	04	EEPROM serial communication error	When a communication trouble occurs with the EEPROM.
CH (Blinking)	-	TD cartridge not installed	Check if TD cartridge is installed.